


## E-wire connection point VOIP setup

These instructions are for customers who are connecting their Cisco phone adapter to their router and handset.

This ATA hardware can only be used with an e-wire connection and must be connected to the wireless router at all times. **DO NOT** factory reset the Cisco device as you will not be able to reconfigure the router unless returned to e-wire connection point for reprovisioning.

**To setup the Cisco Analogue Telephone Adapter follow the instructions below:**

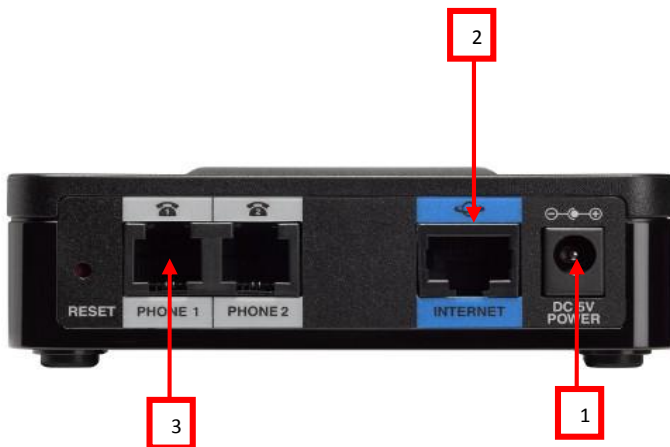

1. Connect the power pack adapter to the mains and plug it in to the port labelled *DC 5V Power*
  2. Connect an Ethernet cable from your wireless router into the port labelled *internet*.
  3. Connect your Handset to *phone 1* using the normal telephone cable (RJ11 connector).
- Please note that you cannot use *port 2* on the Cisco adapter to connect your phone.